


## **CLASS 9066, TYPE W1 CONVERSION KIT**

### **For Converting Class 9066, Types RA & RB Reset Mechanism for Use on NEMA 4 Enclosures**

1. Disassemble standard reset mechanism by loosening Screw A, and discard Reset Housing and Gasket.
2. Reassemble reset mechanism using Housing and Silicone Rubber Boot from Class 9066, Type W1 Conversion Kit.

**NOTE:** Rubber Boot fits over flange of Housing and serves as both a watertight cover for the reset mechanism and as a watertight gasket between Housing and enclosure.

4. Install reset mechanism on enclosure using Instruction Sheet for Type RA or RB device.

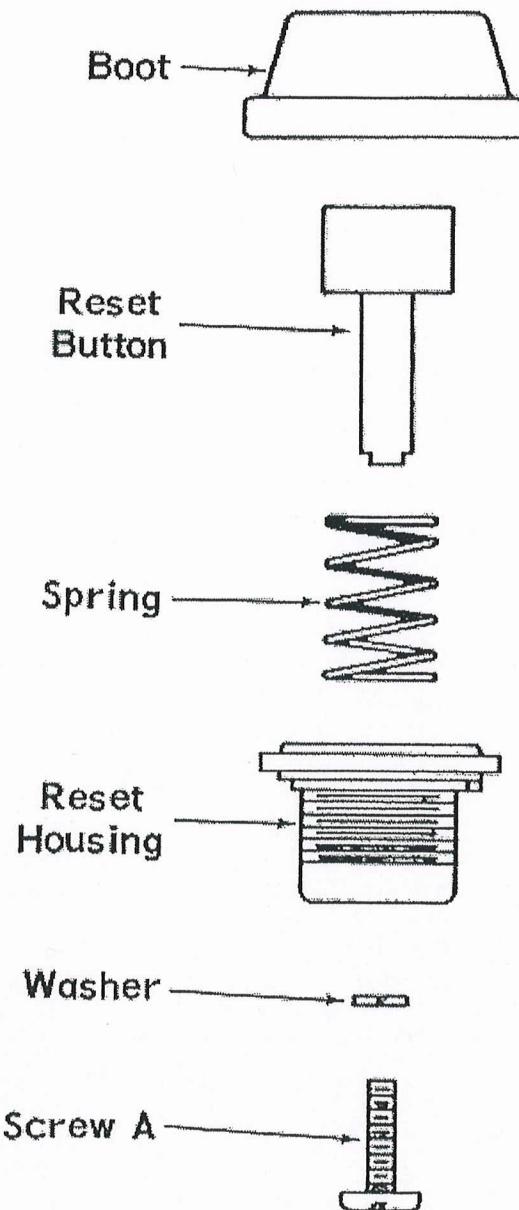

**Figure 1**